

## Package contents

Outdoor Access Point Model WAX608Y



### Pole mounting strap



### Wall-mount screws and anchors

The package also includes a screw placement guide and the installation guide.



201-30553-01

February 2023


**NETGEAR, Inc.**  
350 East Plumeria Drive  
San Jose, CA 95134, USA

**NETGEAR INTERNATIONAL LTD**  
Floor 6, Penrose Two,  
Penrose Dock, Cork,  
T23 YY09, Ireland

© NETGEAR, Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

## Overview

Bottom view with cover removed

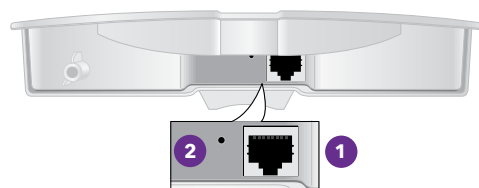

- 1 LAN/PoE+ port
- 2 Reset button


Right side view with LEDs



- 3 Power/Cloud LED
- 4 LAN LED
- 5 2.4 GHz WLAN LED
- 6 5 GHz WLAN LED

## 1. Connect to power and the Internet

## Sample connections

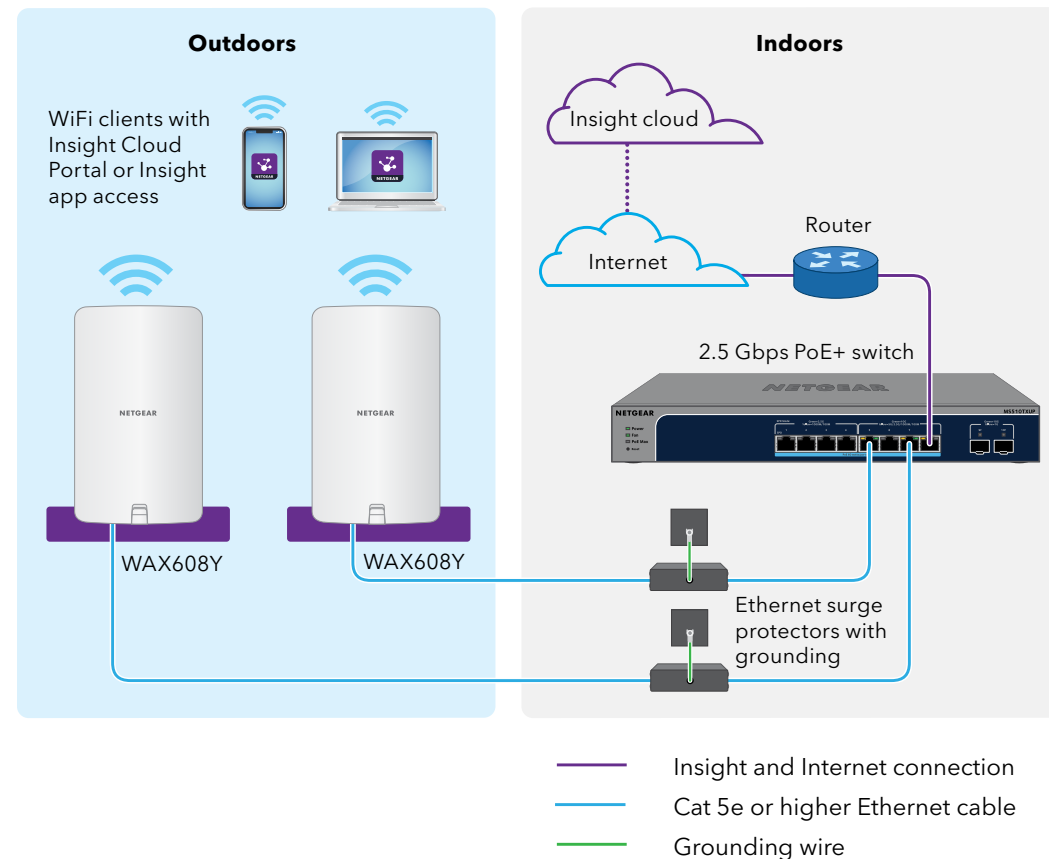









Power up the WAX608Y access point (AP) by connecting the LAN/PoE+ port to a PoE+ switch that supplies 802.3at (PoE+) power. The LAN/PoE+ port is on the bottom behind the cover.

1. If needed, obtain a PoE+ Ethernet surge protector.  
If you use a PoE+ switch that is located indoors, you must use a PoE+ Ethernet surge protector (not supplied) on the cable from the switch to the AP located outdoors. The preceding figure shows such a setup.
2. Use the latch on the front of the AP to open the cover.  
Carefully pull the latch toward you and pull the cover downward so that it slides out of the enclosure. The LAN/PoE+ port is now accessible.
3. Connect the LAN/PoE+ port to a PoE+ switch.  
Make sure that the switch has Internet connectivity.

If connected to 2.5 Gbps equipment, the WAX608Y LAN/PoE+ port supports Ethernet speeds up to 2.5 Gbps within your LAN. The preceding figures show a NETGEAR MS510TXUP switch, which supports speeds of 2.5 Gbps and higher, as well as PoE+. If your Internet connection, modem, router, and switch support a speed of 2.5 Gbps, the AP's Internet connection also functions at 2.5 Gbps. Otherwise, the Internet connection functions at 1 Gbps, which is a common speed.

- NOTE:** The AP receives an IP address from a DHCP server (or a router that functions as a DHCP server) in your network. If your network does not include a DHCP server, the AP uses its default IP address: 192.168.0.100.

After starting up and during setup, the AP's LEDs can light in these colors:

Power/Cloud		<b>Solid amber initially and then blinking amber slowly:</b> The AP is starting, the firmware is being upgraded, or the AP is trying to get an IP address.
		<b>Solid green:</b> The AP completed start up and is functioning either as an Insight-discovered AP that is not currently connected to the Insight cloud or as a standalone AP.
		<b>Solid blue:</b> The AP is functioning in Insight mode and is connected to the Insight cloud.
LAN (one of two speed options)		<b>Solid green:</b> The LAN port detects a speed of 2.5 Gbps.
		<b>Solid amber:</b> The LAN port detects a speed of less than 2.5 Gbps, such as 1 Gbps (which is a common speed).
2.4 GHz WLAN 5 GHz WLAN		<b>Solid green:</b> The radio is operating without clients.
		<b>Solid blue:</b> The radio has at least one connected client.
		<b>Blinking blue:</b> The radio is processing traffic.

For more information about the LEDs, see the user manual, which you can download by visiting [netgear.com/support/download](http://netgear.com/support/download).

## 2. Getting started with NETGEAR Insight™

Your new Insight-manageable device comes with Insight included, offering remote management of all Insight manageable devices on your network and real-time network status notifications.

**Choose the type of account you want:**

- **Insight Premium** supports a single admin and multiple locations
- **Insight Pro** supports multiple admin roles, and organizations in addition to locations

**Use either of these options to access Insight and onboard your Insight device:**

- **Insight Cloud Portal** is your go-to management platform with an extensive set of tools and options including the Topology Viewer. Onboard devices by entering serial numbers and complete configuration in one place. Pro accounts can use bulk upload to onboard multiple devices at once.
- **NETGEAR Insight app** is a convenient way to monitor your network on the go, and offers an alternative way to onboard devices by scanning the barcode.

For more information on Insight, visit the NETGEAR website:

- [netgear.com/business/services/insight/subscription/](http://netgear.com/business/services/insight/subscription/)
- [kb.netgear.com/000061848](http://kb.netgear.com/000061848)

### 3. Log in or create an Insight account

Your NETGEAR account is also your Insight account. You can use your NETGEAR account credentials to log in as an Insight Premium user, or if you upgrade to an Insight Pro account, as an Insight Pro user.


If you do not already have an NETGEAR Insight account, you can create an account now. For information about creating an Insight Premium or Pro account, or upgrading an existing Insight Premium to a Pro account, visit [kb.netgear.com/000044343](https://kb.netgear.com/000044343).

Continued on next page

## 4. Onboard your device to NETGEAR Insight

Choose the method that you want to use to onboard your device:

- [A. Onboard via the NETGEAR Insight Cloud portal](#)
- [B. Onboard via the NETGEAR Insight app](#)

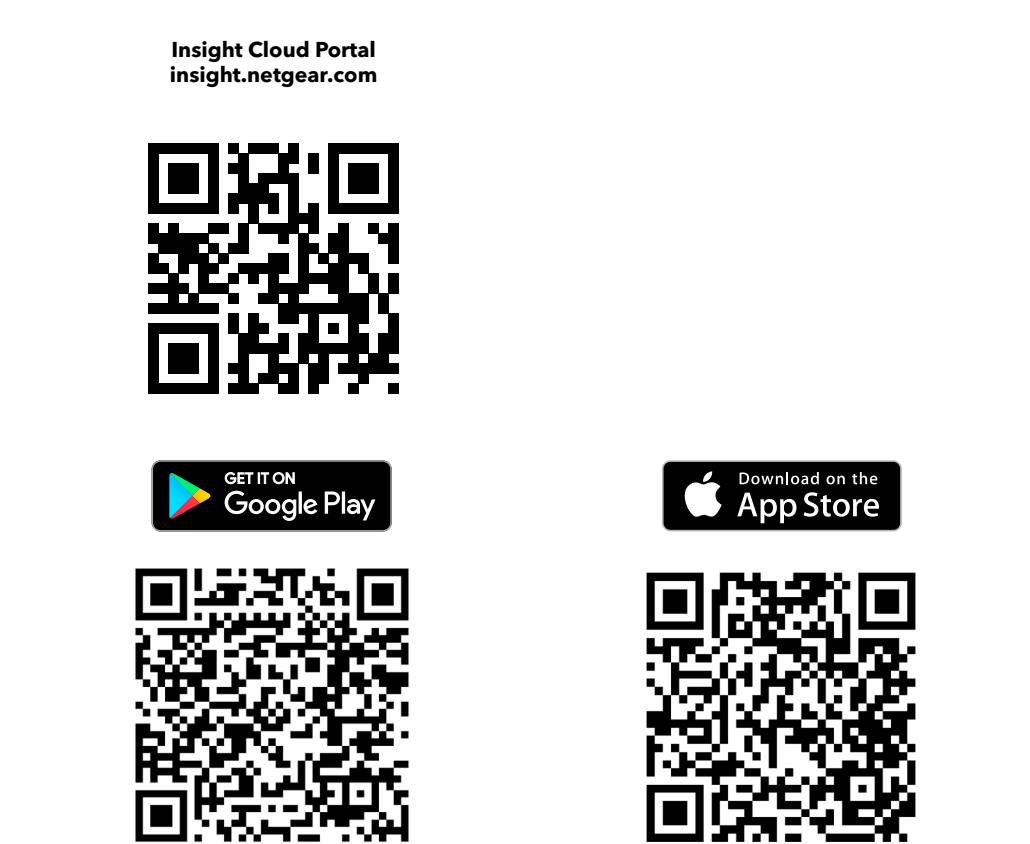

### A. Onboard via the NETGEAR Insight Cloud portal

1. Make sure that the AP is connected to the Internet.
2. On a tablet or computer, scan the QR code for the Insight Cloud Portal or visit [insight.netgear.com/](https://insight.netgear.com/).
3. Enter the email address and password for your NETGEAR account and click the **NETGEAR Sign In** button.
4. For Insight Pro, select the organization to which you want to add the AP.
5. Select the network location, or create a new network location.
6. Click the **+** (**Add Device**) button.  
**NOTE:** Insight Pro users can either add a single device or add multiple Insight managed devices by uploading a device list as a CSV file.
7. In the Add New Device pop-up page, enter the AP's serial number and MAC address, and then click **Go**.
8. After Insight verifies that the AP is a valid product, you can optionally change the device name of the AP, and then click **Next**.

When the AP is successfully added to the portal, a page displays a confirmation that setup is in progress.

### B. Onboard via the NETGEAR Insight app

1. Connect your mobile device to the AP's setup SSID (WiFi network name) using one of these methods:
  - **Scan the QR code:** Scan the QR code on the AP label to connect to the setup SSID.
  - **Connect manually:** The setup SSID is on the AP label and is shown in the format NETGEARxxxxxx-SETUP, where xxxxxx are the last six digits of the AP's MAC address. The default WiFi passphrase is **sharedsecret**.
2. Open the NETGEAR Insight app.
3. Enter the email address and password for your account and tap **LOG IN**.
4. Add a new network location where you want to add the AP by tapping the **Next button**, and then tapping **OK**. You can also select an existing network location.  
The device admin password that you entered for the new network location replaces the existing admin password on all devices that you add to the network location.  
In most situations, Insight detects the AP automatically, which can take several minutes.
5. To add the AP to your network location, do one of the following:
  - If the AP is automatically detected and listed in the Insight Manageable Devices section, tap the icon for the AP, and then tap the **ADD DEVICE** button.
  - If the AP is not automatically detected, or you prefer to use another method to add the AP, tap the **+** icon in the top bar, and do one of the following:
    - Tap the **SCAN BARCODE OR QR CODE** button, and then scan the AP's code.
    - Tap the **Enter Serial Number and MAC Address** link, and then manually enter the AP's serial number and MAC address.
6. If prompted, name the AP and tap the **Next** button.

### Results

The AP automatically updates to the latest Insight firmware and Insight location configuration. This might take up to 10 minutes, during which time the AP restarts.

The AP is now connected to the Insight cloud-based management platform. The Power/Cloud LED lights solid blue.

If the AP does not show as Connected in Insight, visit [kb.netgear.com/000065137](https://kb.netgear.com/000065137).

## Mounting options

You can mount the AP to a wall. The package includes two screws, two washers, and a paper screw placement guide.


You can also mount the AP to a pole. The package includes a pole mounting strap.

**NOTE:** Before you mount the AP at a permanent location outdoors, we recommend that you configure the AP for your network environment and test your setup.

### Mount to a wall


**CAUTION:** Make sure that the wall is not damaged.

The back of the AP provides two holes for wall mounting. The arrows in the following figure show the holes.

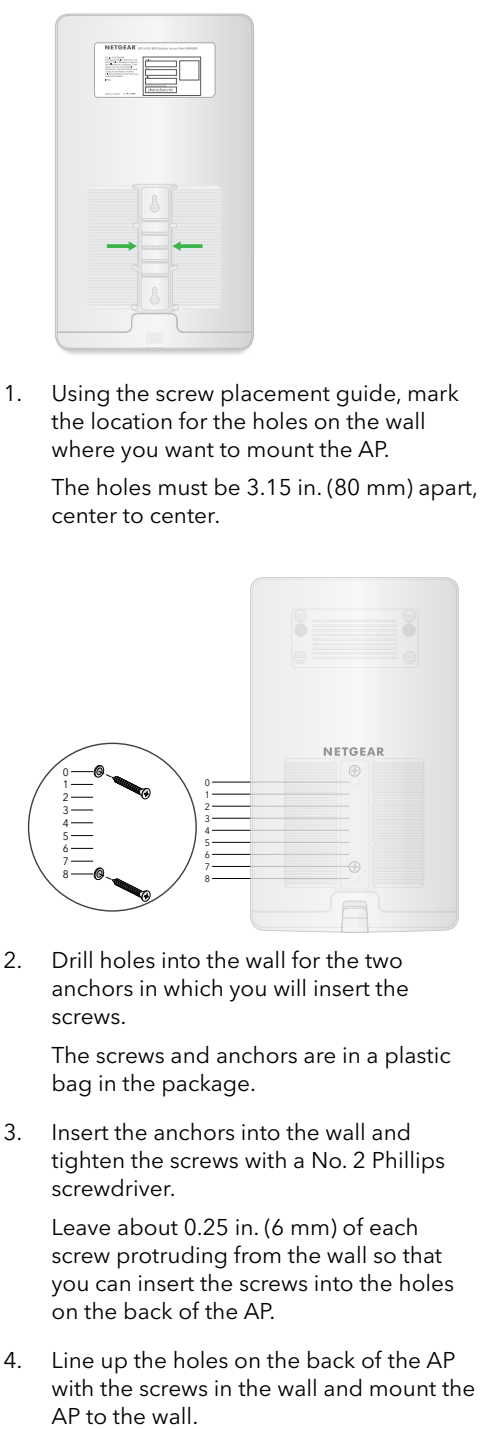

### Mount to a pole

The back of the AP provides openings for the pole mounting strap. The arrows in the following figure show the middle opening.

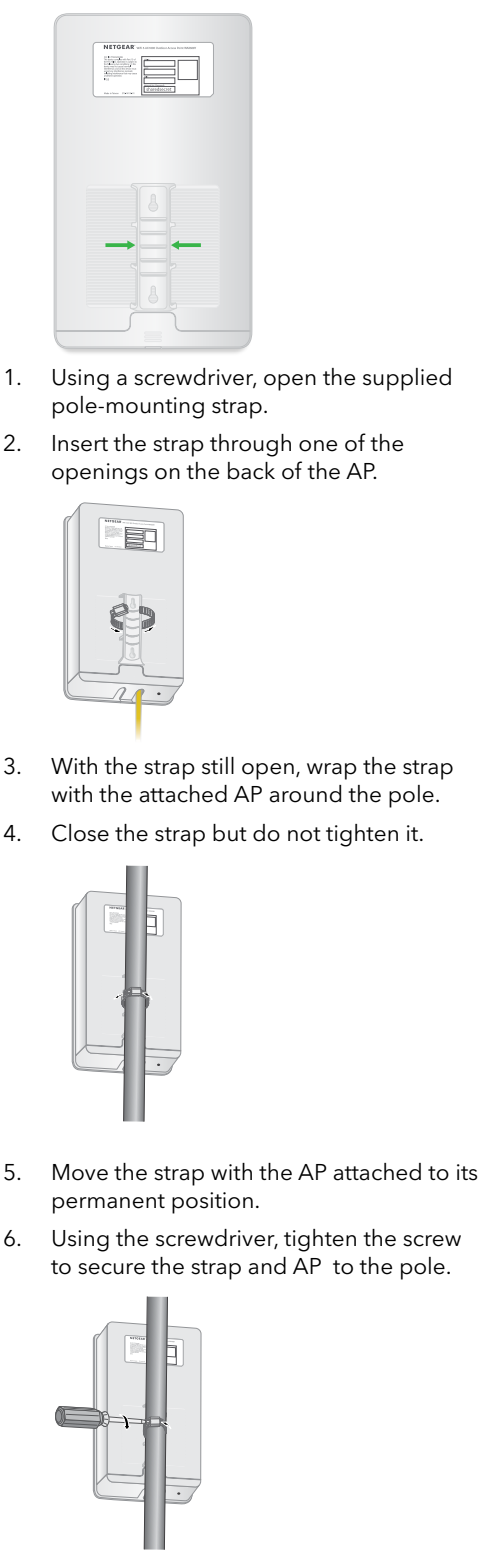

## Support and Community

Visit [netgear.com/support](https://netgear.com/support) to get your questions answered and access the latest downloads.

You can also check out our NETGEAR Community for helpful advice at [community.netgear.com](https://community.netgear.com).

## Regulatory and Legal

Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à <https://www.netgear.com/support/download/>.

(If this product is sold in Canada, you can access this document in Canadian French at <https://www.netgear.com/support/download/>.)

For regulatory compliance information including the EU Declaration of Conformity, visit <https://www.netgear.com/about/regulatory/>.

See the regulatory compliance document before connecting the power supply.

For NETGEAR's Privacy Policy, visit <https://www.netgear.com/about/privacy-policy>.

By using this device, you are agreeing to NETGEAR's Terms and Conditions at <https://www.netgear.com/about/terms-and-conditions>. If you do not agree, return the device to your place of purchase within your return period.

Applicable to 6 GHz devices only: Only use the device indoors. The operation of 6 GHz devices is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.